GB **AMW 524**

# QUICK REFERENCE GUIDE

## CONTROL PANEL

**Selection window**
Displays the selected function.

**Multifunction knob**
Turn to select a desired function:
Timer
Microwaves
Grill
Grill Combi
Turbo Grill Combi
Forced Air
Forced Air Combi
Quick Heat
Auto functions

**Auto button**
Press to select one of the autofunctions:
Jet defrost
Auto reheat
Auto Cook
Auto Forced Air Combi

**Digital display**
The display includes a 24-hour clock and indicator symbols.

**Selector Indicator lights**
These indicates which selection you are currently working with.

**Select button**
Press to select setting:
Weight
Time
Microwave power level

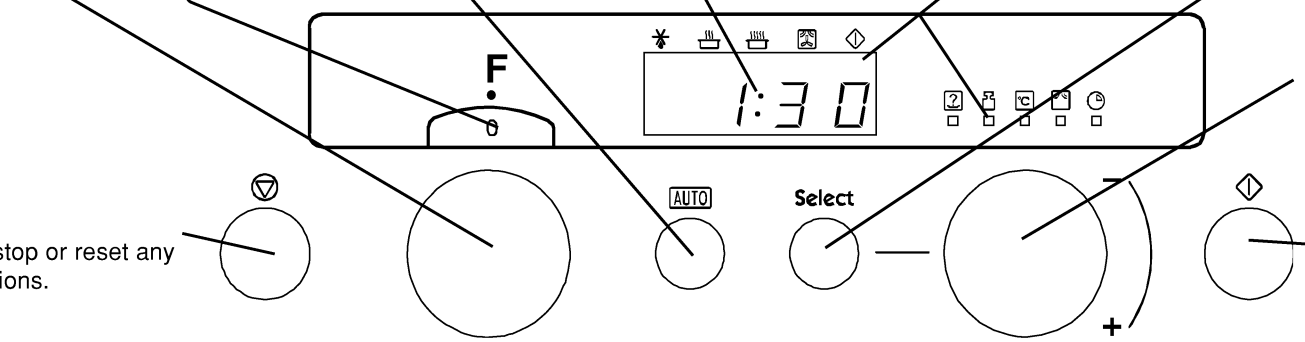


**+/- knob**
Turn to set value of:
Time
Weight
Doneness

**Stop button.**
Press shortly to stop or reset any of the oven functions.

**Jet Start button.**
Use to start the cooking process or invoke the Jet Start function.

## CHOOSING MICROWAVE POWER

*MICROWAVES ONLY*

| Level | | To be used for: |
|---|---|---|
| JET / 900 W | | Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power. |
| 750 W | | Cooking of vegetables, fish, meat etc. |
| 650 W | | Cooking dishes, not possible to stir. |
| 500 W | | More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles. |
| 350 W | | Simmering stews, melting butter. |
| 160 W | | Defrosting. |
| 90 W | | Softening butter, cheese and ice cream. |
| 0 W | | Setting the standing time. |

*MICROWAVES & GRILL / TURBO GRILL*

| Level | To be used for: |
|---|---|
| 90 - 160 W | Fish, fruit |
| 160 - 350 W | Vegetables, gratins |

*FORCED AIR*

| Level | To be used for: |
|---|---|
| 90 - 160 W | Roasts, cakes |
| 160 - 350 W | Lasagne, poultry |

## MANUAL DEFROSTING

**This function is used** for defrosting food not included in the Jet defrost function.
**Follow the procedure** for “How to cook and reheat with microwaves” and choose 160 W when defrosting manually.

## JET START FUNCTION

**This function is used** for quick reheating of food with a high water content such as; clear soups, coffe or tea.
**Press to automatically start** with full microwave power level and the cooking time set to 30 seconds. Each additional press increases the time with ½ min. You may also alter the time by turning the Adjust knob to increase or decrease the time.
This button also works as a normal start button after setting a function.

**NOTE: Never operate the oven empty when using microwaves**

GB **AMW 524**

# QUICK REFERENCE GUIDE

## AUTO FUNCTIONS

*QUICK GUIDE*

1. **Turn** the multifunction knob to the Auto position.
2. **Press** the Auto button to select the desired auto function.
3. **Turn** the +/- knob to choose desired food class.
4. **Press** the Select button (default weight is displayed).
5. **Turn** the +/- knob to set the weight of the food.
6. **Press** the Start button.

**Midway thru** the process, the oven may STOP and prompt you to "TURN or STIR FOOD":
— Don't use the stop button!
— Just open the door and turn the food.
— Close, and restart with the Jet Start button.

**Automatic but less perfect results:**
**If you do not turn the food** when the oven prompts you to do so, the oven will AUTOMATICALLY RESTART after 1 minute. The oven then completes the process. The time will be longer in this case and the result will be less perfect, than it would have been if you had turned the food when prompted to do so.

### AUTO JET DEFROST

**Use this function for** defrosting ONLY. Jet Defrost can only be used for very fast defrosting of frozen food belonging to the categories listed here. Use manual defrost for other food or weights not listed.

PLEASE NOTICE
**To achieve perfect results** it is NECESSARY to:
— Input, with the max. possible precision, the WEIGHT of the food selected.
— Turn the food when the oven prompts you to do so.

1 MEAT
(100 g - 2 Kg)

2 POULTRY
(100 g - 3 Kg)

3 FISH
(100 g - 2 Kg)

4 VEGETABLES
(100 g - 2 Kg)

5 BREAD
(100 g - 2 Kg)

### AUTO REHEAT

**Use this function** when reheating readymade food or milk. Auto Reheat can be used for food belonging to the categories listed here.

PLEASE NOTICE
**During the heating process** the oven may stop and prompt you to "STIR" food.

1 DINNER PLATE
(250 g - 600 g)

2 SOUP
(200 g - 800 g)

3 FROZEN PORTION
(250 g - 600 g)

4 MILK
(100 g - 500 g)

5 CASSEROLE
(200 g - 800 g)

**NOTE: Never operate the oven empty when using microwaves**

### AUTO COOK

**Use this function for** cooking ONLY. Auto Cook can only be used for food belonging to the categories listed here. Use "Cook & Reheat with microwaves" for other food or weights not listed.

PLEASE NOTICE
**During the cooking process** the oven may stop (depending on program) and prompt you to "TURN or STIR" food.

1 BAKED POTATOES
(200 g - 1 Kg)

2 FRESH VEGETABLES
(200 g - 800 g)

5 POPCORN
(90 g - 100 g)

3 FROZEN VEGETABLES
(200 g - 800 g)

4 CANNED VEGETABLES
(200 g - 600 g)

### AUTO FORCED AIR COMBI

**Use this function for** cooking from raw or frozen. Auto Forced Air Combi can only be used for food belonging to the categories listed here. Use "Forced air or Forced air & microwaves" for other food or weights not listed.

PLEASE NOTICE
**After the PRE-HEATING process** the oven will stop and prompt you to "ADD" food.

1 CHICKEN
(800 g - 1½ Kg)

2 FROZEN LASAGNE
(400 g - 1 Kg)

3 COOKIES

4 CANNED BREAD DOUGH

5 FROZEN ROLLS

### GRILL

**Use this function** when cooking:
- Cheese toast & Hot sandwich
- Sausages
- Grill spit
- Pommes Duchesse
- Gratinated fruit

### GRILL COMBI

**Use this function** when cooking:
- Potato gratin
- Fish gratin
- Lasagne

### TURBO GRILL COMBI

**Use this function** when cooking:
- Chicken pieces
- Stuffed vegetables
- Baked potatoes

## TECHNICAL SPECIFICATION

| | |
|---|---|
| **Supply voltage** | 230 V/50 Hz |
| **Rated Power Input** | 2800 W |
| **Fuse** | 16 A (UK 13 A) |
| **MW output power** | 900 W |
| **Grill** | 1600 W |
| **FA** | 1200 W |
| | **H x W x D** |
| **Outer dimensions:** | 455 x 595 x 560 |
| **Oven compartment:** | 210 x 450 x 420 |

4619 694 45311